

GSM-R HANDSET - OPERATING GUIDE




Switch ON/OFF – hold down for 3 seconds


All handsets require a pin code on start up. The 4 digit pin code is located on the rear of the handset

Enter the pin code and press enter
*Note – 3 incorrect entries result in the full shut down of the handset

To call another GSM-R handset:

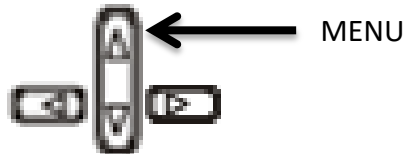

MENU

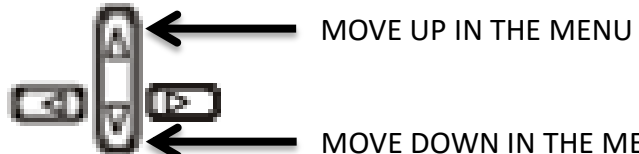


MOVE UP IN THE MENU



MOVE DOWN IN THE MENU

Use the arrows UP/DOWN to select the PHONEBOOK icon and then press the SELECT button (this will be indicated on the screen and button is below screen on left)

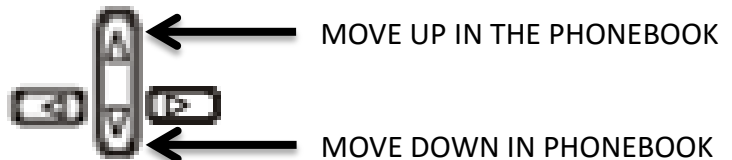

MOVE UP IN THE PHONEBOOK



MOVE DOWN IN PHONEBOOK

Each handset assigned to a worksite is programmed into the handset and numbered. The number of the handset is located on the rear behind the belt clip



To LOCK/UNLOCK the handset
Top button followed by bottom button as above



ACCEPT CALL



END CALL