



# RPB Z-Link – Operating Instructions

## Breathing Tube Connection

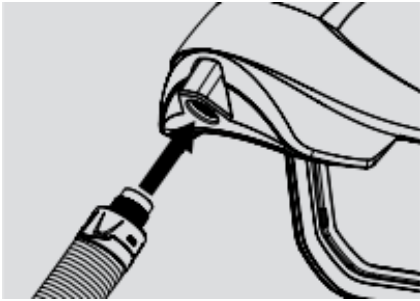

Helmet:

Insert the threaded end of the breathing tube into the threaded hole in the back of the Z-Link and screw the breathing tube in completely without over tightening

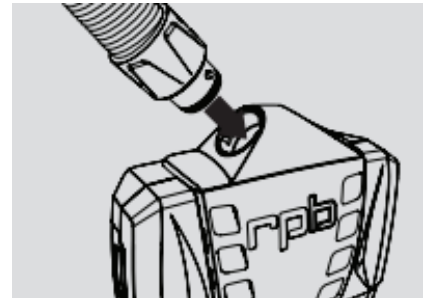

Powered Respirator:

Insert the bayonet end of the breathing tube into the outlet of the PX4 AIR PAPR and twist it in until it is secure



## Turn On/Off

Press the green power button for 2-3 seconds to power unit on. Repeat to power off.

Once powered on the battery light will show green

The BATTERY light will indicate when the battery requires charging  
The FAN light will signal an alarm if performing below requirements

## Battery Test

On the bottom of the battery there is a charge indicator.

Push the green battery button to confirm level

