

Versaflo – Operating Instructions

Breathing Tube Connection

Helmet:

To attach the breathing tube to the helmet, push the connector until a click noise is heard.

To remove the breathing tube from the helmet, squeeze the blue securing clip together and pull the tube away from the helmet



Powered Respirator:

To attach the breathing tube, insert the end into the respirator opening and twist clockwise until secure.

To remove the breathing tube, twist the connector anti clockwise to a stop and pull away from the unit.


Turn On/Off

Press blue power button for 2-3 seconds to power unit on. Repeat to power off.

Once powered on the ON light will show green (1)

The BATTERY light will indicate when the battery requires charging (2)

The FAN light will signal an alarm if performing below requirements (3)

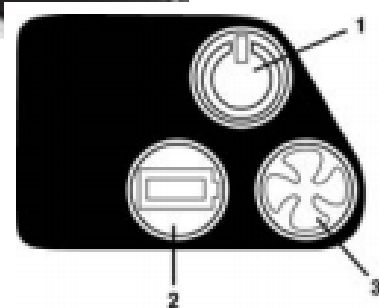

Battery Test

On the bottom of the battery there is a charge indicator.

Push TEST button to confirm level

Battery charge - 5 bars = 80-100%

